


**GREEN HITECHS PORTABLE WATER PURIFICATION SYSTEM
GHT-PWPS-5.0
ASSEMBLY INSTRUCTIONS**


STEP 1

Separate the component pieces and verify all listed parts are included in the package.

- Select one Bucket and one of the Bucket Lids
- Place the Bucket UPSIDE DOWN on the floor
- Place the Lid UPSIDE DOWN on top of the inverted Bucket. Make sure the Lid is securely fitted on top of the base of the inverted Bucket

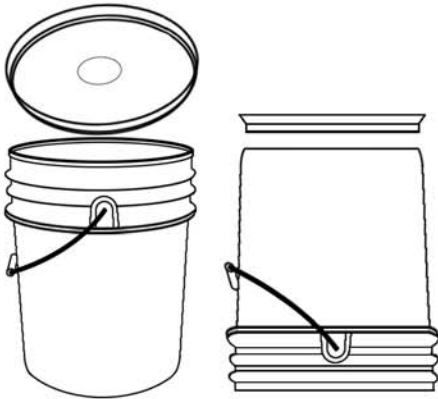

- Place drill point marks on the Lid. Using a Ruler, find the Center of the upside down Lid and place a mark. With the Ruler positioned along the diameter of the Lid, place a mark on both sides of the Center Mark exactly 8 cm from the Center Mark (16 cm distance between these drill point marks).

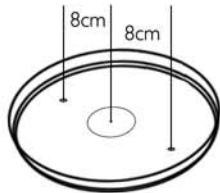


- Drill Filter Unit holes. Using the Drill with a 1/2" Drill Bit, place a 1/2" hole through each of the two drill point marks on the Lid and continue drilling through the base of the inverted Bucket (this will be the Upper Bucket in the system). ***IMPORTANT*** – Be careful to maintain the position of the Lid on the inverted Bucket and drill each hole through the Lid AND the bottom of the inverted Bucket. It is VERY important that the holes on the base of the inverted Bucket align exactly with the holes in the Lid.




Drill Bit – 1/2"
(hole diameter)

STEP 2

- Position the Upper Bucket & Lid with drilled holes for Assembly. Keep the Lid positioned against the base of upper Bucket (with all of the newly drilled holes in alignment).
- Place the Filter Units inside the Upper Bucket & securely attach them to the Lower Bucket Lid (this is the Lid with the drilled holes).
- Holding a Filter Unit, place a Filter Unit Washer on the stem and press it against the base of the Filter Unit. Using the Bucket which has the holes drilled in the base, insert the stem through a hole in the base of the Upper Bucket and also through the holes in the Lower Bucket Lid. Then place the Filter Unit Wing Nut onto the stem. Advance the Wing Nut to secure the Filter Unit against the base of the Bucket and the Lower Bucket Lid tightly against the base of the Upper Bucket. Tighten the Wing Nut to "finger tight". The Wing Nut should be snug enough to prevent water seepage between the upper bucket & lower bucket through the assembly.
- Repeat the above process for the second Filter

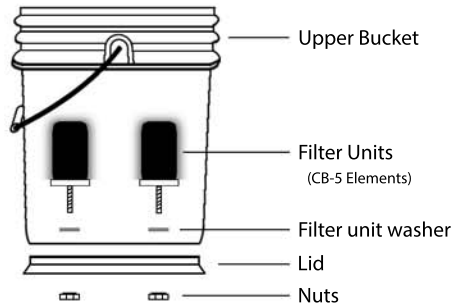

- Install the Water Tap Unit onto the Lower Bucket. Place a mark on the side of the second [the Lower] Bucket approximately 1.5" above the base. Align the drill with the 7/8" Bit on the marked position and drill a hole in Lower Bucket. Insert a Tap Unit Washer, with the flat side of the washer against the Tap Unit, onto the stem of the Tap Unit. Insert the Tap Unit stem through the newly drilled hole in the side of the Lower Bucket and place the other Tap Unit Washer onto the Tap Unit Stem, with the flat side of the washer facing away from the hole in the Bucket. Thread the Tap Unit Hex Head Nut onto the stem and hand tighten it to secure the Tap Unit onto the side of the Bucket. Do not over-tighten the Nut, however, it should be tight enough to prevent any seepage of water through the assembly to the outside of the Bucket.

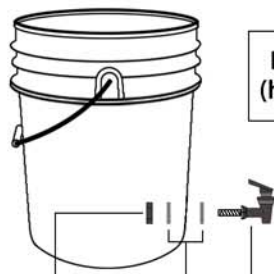


Drill Bit – 7/8"
(hole diameter)

Washers
1 1/8" Hex Nut Water Tap (Faucet)

STEP 3

- Place the Upper Bucket onto the Lower Bucket. Place the Bucket containing the Filter Units (Upper Bucket) on top of the Bucket that has the Water Tap Faucet Unit (Lower Bucket). Fill the Upper Bucket with water and begin using the Green Hitechs Portable Water Purification System (GHT-PWPS-5.0).

IMPORTANT – Prior to consuming any water from the GHT-PWPS-5.0, follow the Filter Priming Instructions included with the GHT-5 Elements.

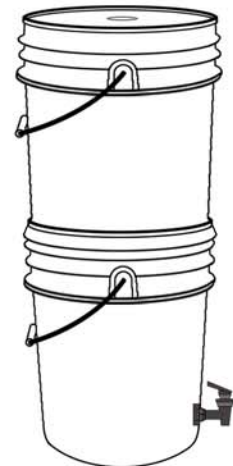

For additional information, including the opportunity to purchase replacement Filter Units, please contact:

GREEN HITECHS
820 So. MacArthur Blvd., Ste 105-410
Coppell, TX 75019 U.S.A.
ATTN: Customer Service

Ph: +1-469-463-8885
Email: Info@ContiGroup-LLC.com
Web: www.ContiGroup-LLC.com

COMPONENT PARTS – INCLUDED

- GHT-PWPS-5.0 Bucket – 5 Gal Bucket 2 pcs
- GHT-PWPS-5.0 Bucket Lid – 5 Gal Bucket 2 pcs
- GHT-PWPS-5.0 Filter Unit (CB-5 Element) 2 pcs
- GHT-PWPS-5.0 Filter Unit Washer 1/2" 2 pcs
- GHT-PWPS-5.0 Filter Unit 1/2" Wing Nut 2 pcs
- GHT-PWPS-5.0 Water Tap (Faucet) 1 pcs
- GHT-PWPS-5.0 Water Tap Washer 1 1/4" 2 pcs
- GHT-PWPS-5.0 Hex Head Nut 1 1/8" 1 pcs

REQUIRED ASSEMBLY TOOLS – NOT INCLUDED

- Drill – Either power or hand operated
- Drill Bit – 1/2" (hole diameter)
- Drill Bit – 7/8" (hole diameter)
- Ruler
- Pen or other marking device